



INSTALLATION GUIDE FOR TAILORED PLANK HERRINGBONE 2G CLICK

BEFORE YOU BEGIN

- Make sure you have the latest Installation Guide to ensure up to date information by referring the revision date. Up to date installation documents can be found at www.kennedyfloorings.com/ installation. Adherence to Installation Guide is mandatory to validate warranty.
- Adherence to Care & Maintenance Guide is mandatory to validate warranty. Care & Maintenance guide can be found at www.kennedyfloorings.com/maintenance.
- Flooring products must be acclimatized for at least 48 hours prior to installation in the installation area that meets the SUITABLE ENVIRONMENT guideline.
- Flooring products must be installed on a surface that meets the SUITABLE SURFACES guideline.
- In the rare event of visually defective material, Forth Surfaces will not be held responsible for the installation of material with visual defects. It is the responsibility of the installer to visually approve material before it is installed.
- Forth Surfaces will not be held responsible for the installation of an incorrect product. It is the responsibility of the installer and the end user to double check that the product to be installed is from the correct product collection and is the correct decor.
- Forth Surfaces Tailored Plank flooring products are manufactured in accordance with recognized industry standards allowing manufacturing tolerance of 2%; therefore, the installer/owner must use reasonable selectivity and allow for defects accordingly. Pieces of flooring with noticeable flaws such as slight film contamination are generally used for cuts or for installation in closets, along walls, or areas covered by furniture.
- • The installer/owner assumes full responsibility for the final inspection of this product. Inspection should be done prior to installation and should include: print/colour/texture, factory finish and milling. If the product is not acceptable, DO NOT INSTALL IT. Contact your dealer immediately for assistance. Flooring that has been installed will be deemed to have been inspected and quality accepted.
- • Forth Surfaces accepts no responsibility for product failure extending from or related to failure to meet job area/environment and subfloor requirements. If the installation is for a newly built home or construction, the installer/owner must ensure all windows and doors are installed and that wall and floor boards are completely dry and that the homes HRV/heating/air-conditioning system is functional and running at living conditions to which the floor will be maintained. It is recommended that flooring be the last stage in a construction project.
- • Before starting installation, it is important you read all instructions and warranty information. By starting installation of this product you are agreeing that you have read and understand all installer/owner's requirements and responsibilities and are aware that deviating from the instructions and recommendations in this installation guide may result in voiding the product warranty. Warranty information can be found at www.kennedyfloorings.com/warranty.

SUITABLE ENVIRONMENT

- Tailored Plank flooring is intended for indoor use only.
- Tailored Plank flooring can be installed in environments with a temperature variation of -40°C and +40°C.
- The temperature variation during its occupied use is assumed to remain between 16°C and 40°C.
- During installation the installation area must be climate controlled at a temperature between 16°C and 25°C with the product given 48 hours to acclimatize to the climate controlled installation area.

SUITABLE SURFACES

Adequate sub-floor preparation is necessary to ensure a successful installation. It is the sole responsibility of the installer/owner, prior to installation, to assure that the planned installation area is suitable for Tailored Plank flooring.

- The subfloor must be well-bonded, dry, smooth, level, clean, and dust-free, with a tolerance not exceeding more than 1/8" in a 6' span.
- All sub-floor and leveling patch must be done with a non-shrinking, water-resistant Portland cement patching compound.
- Holes, grooves, expansion joints, and other depressions must be filled with a Portland cement-based leveling compound and troweled smooth and feathered even to the surrounding surface.
- If installing on a concrete slab, it must be dry, clean, and well-cured for at least 6 weeks prior to installation). Concrete must be free from dust, powder, flaking, solvent, paint, wax, grease, oil, and other erroneous compounds. Moisture content of concrete subfloor should not exceed 5%.
- Installing on wood and wood composite panels (plywood, OSB, flake board, and particle board) can be used provided they are smooth, flat, structurally sound, and free of deflection.
- It is acceptable to install over an existing ceramic tile provided it be made smooth by applying a water-resistant Portland cement overlay such as patching or leveling compound to smooth out grout joints.
- Moisture in the sub-floor will not damage the flooring, but excessive moisture may cause mold or mildew in the sub-floor and surrounding structures, so ensure that the subfloor is free of excess moisture.
- Tailored Plank flooring can be installed over existing non-cushioned resilient flooring, ceramic tile, and existing wood floors, as long as the floors are clean, level, well bonded to the sub-floor and free of cupping and deflection.
- Forth Surfaces accepts no responsibility with product failure or issues caused by an underlying flooring or failure to meet subfloor requirements.

WARNING: DO NOT REMOVE OLD RESILIENT FLOORING. THESE PRODUCTS MAY CONTAIN EITHER ASBESTOS FIBERS OR CRYSTALLINE SILICA, WHICH CAN BE HARMFUL TO YOUR HEALTH. PLEASE HAVE OLD FLOORING TESTED FOR ASBESTOS PRIOR TO REMOVAL.

NEVER SCRAPE ADHESIVE RESIDUE THAT MAY CONTAIN ASBESTOS. NEVER USE LIQUID CHEMICALS TO REMOVE OLD ADHESIVE. SOLVENTS OR OTHER ABRASIVE CHEMICALS USED TO CLEAN THE SUB-FLOOR CAN DAMAGE THE UNDERPAD BACKING.

RADIANT HEATED FLOORS & SUN ROOMS

Tailored Plank flooring can be installed with concrete embedded radiant heated floors with the following exceptions below.

- Flooring must be installed using an embedded hydronic radiant heat system or electric radiant heat system that utilize embedded cables within the sub-floor.
- Radiant heat systems must be covered by a self leveling concrete and separated by the flooring at a minimum of 1/2".
- Radiant heat must not exceed 29°C and changes in temperature settings must be gradual at 1°C everyday until the desired temperature is reached.
- It is recommended that transitions are used between areas with and without radiant heat.
- Do not allow sun rooms to exceed 40°C.

TOOLS & SUPPLIES

You will need a few tools to ensure a successful installation:

- 1) Measuring: straight edge, framing square, tape measure.
- 2) Cutting: exacto knife, laminate cutter, miter saw, or table saw
- 3) Installing: spacers, tapping block, rubber mallet, and pull bar.
- 4) Safety: safety glasses, and a NIOSH approved dust mask for use with a power saw.

CUTTING PLANKS & TILES

- Tailored Plank flooring can be scored and snapped using a high quality sharp utility knife.
- Tailored Plank flooring can be cut using a laminate cutter.

- Power saws (circular saw, table saw, miter saw, or jigsaw) can be used to cut the product, but planks or tiles should always be cut away from the installation area in a well ventilated space in order to prevent debris from affecting the installation site.
- Always wear safety glasses and a NIOSH approved dust mask when using a power saw.

FORTH SURFACES

INSTALLATION GUIDE

TAILORED PLANK

(888) 933. 4746

www.forthsurfaces.com

INSTALLATION

Forth Surfaces Tailored Plank flooring with the 2G Angle-Tap-Click locking system is engineered to be installed utilizing the floating installation method.

- Do not install cabinets or fixed objects on top of the Tailored Plank flooring.
- Verify locking profile prior to installation, checking for debris or damage.
- Can be installed up to 100' by 100' before requiring a transition.
- It is highly recommended to sort through at least 25% of your flooring material by categorizing each visual variation into its own pile to ensure a successful "blend" of the flooring. Failure to do this crucial step may result in an unsatisfactory installation as certain areas may contain more of one image variation than another.







BEFORE BEGINNING INSTALLATION ENSURE THAT SUITABLE ENVIRONMENT AND SUITABLE SURFACES GUIDELINES HAVE BEEN MET. NEGLECTING TO MEET GUIDELINES MAY RESULT IN A VOIDED WARRANTY.

PLANNING YOUR INSTALLATION

1. Determine the direction you want the flooring to run. Typically the herringbone "pattern" of the flooring will run with the length of the room or the length of the floor plan.
2. Before starting the installation, we recommend sorting the material into two separate piles - the "A" pieces and the "B" pieces.
3. The herringbone installation should start along the central "Y" axis of the room; use a chalk line to mark the "Y" axis at the centre of the room. This is the central point from which the herringbone pattern will build off of in both the right and left direction of the "X" axis of the room along the wall.

INSTALLING WITH THE 2G ANGLE-TAP-CLICK LOCKING SYSTEM

Forth Surfaces Tailored Plank flooring products that utilize the 2G Angle-Tap-Click locking system are installed in such a manner that the tongue joint of the plank is "seeded" into the receiving (groove) joint and is then engaged with a tapping block and rubber mallet. When tapping the joints together, excessive force may damage the locking system, and not enough force may not allow the locking system to fully engage; finesse is required here.

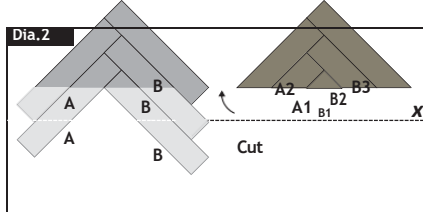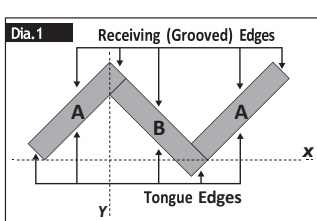

4. Follow these instructions when using the locking system:

- a. Angle in the tongue of long joint into the receiving long joint of the plank that is parallel. Planks that run parallel should be designated both as the same "A" or "B" plank.
- b. Next, slide the plank down so that it meets the plank that is perpendicular. Planks that run perpendicular will be designated differently from each other, that is "A" and "B".
- c. Drop the plank down so the tongue end joint is seeded into the receiving long joint of the perpendicular plank. Dropping a plank into the locking system should yield little to no resistance; forcing this step may damage the locking system. Note that the tongue end joint should be resting on top of the receiving end joint; both planks should be close to being flush with a small gap that is a 1mm or less.
- d. Next, fully engage the locking system by tapping along the entire long joint with a tapping block and rubber mallet, then moving to the end joint.

5. Diagram 1 illustrates the pattern in which the planks should be installed; The orientation of the "A" and "B" planks will always remain the same. The receiving joints should always face away from the starting wall along the "X" axis.
6. Begin the installation by assembling the triangles as shown in Diagram 2, cutting planks to make each piece of the triangle; A1, A2, B1, B2, and B3. Following the steps from Diagram 2a, 2b, 2c, and 2d, assemble the triangle following the instructions of the locking system.

7. Place the first triangle centered at the "Y" axis of the room as determined from step 3 and illustrated in Diagram 3. Continue to lay down the assembled triangles on the right and left hand side of the center triangle, placing them together where their corners meet. Remember to maintain a 1/4" to 1/2" expansion gap off the wall.

8. Triangles will need to be cut down to fit the sections along the wall where a full triangle cannot be placed, as shown in Diagram 3. Measure the "u" and "t" distances to decide where the cuts are required. Remember to take into account the expansion gap along the "Y" axis of the wall when making the cut.

9. Once the initial wall along the "X" axis is covered, as shown in Diagram 3, connect the triangles together using "A" planks as illustrated in Diagram 4. Using the locking system is explained in step 4. The flooring may shift during this step, so ensure that the flooring remains square to the wall with a 1/4" to 1/2" expansion gap.

10. Continue with the installation moving left to right first by installing all of the "B" planks on the row. As shown in Diagram 5, begin by inserting the tongue long joint of the "B1" plank into the plank "B" that it is parallel to. Slide "B1" plank along the "B" plank, lining up the "B1" end joint with the "A" plank end joint. Drop the "B1" plank into place, there should be little resistance so do not force it. The end joint of "B1" should line up with plank "A" so that "B1" seeds the long joint of plank "A". Further instructions of the locking system is found in step 4.





11. Using a pull bar or tapping block with a rubber mallet, fully engage the locking system along the long joint of "B1". To fully engage the end joint of "B1", it will might be necessary to use a pull bar along the wall.

12. Continue steps 8-9 until all "B" planks are installed, after which move onto step 13.

13. Moving left to right, install all of the "A" planks beginning with "A1". Same as step 8, the long end joint of the "A" planks need to be inserted into the "A" planks that it will run parallel with. After inserting the long joint, slide it down so that the end joint meets up with the "B" plank. Drop the plank into place and tap the long end joint of the plank to fully engage the locking system, do the same along the end joint. Full locking system instructions is found in step 4.

14. Continue step 13 until the row is complete, then begin a new row by starting over at step 10.

- Use a mitre saw for cutting intricate pieces to fit around door jams and cabinets.

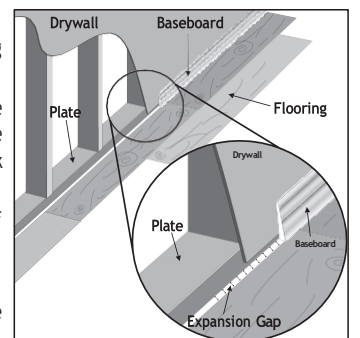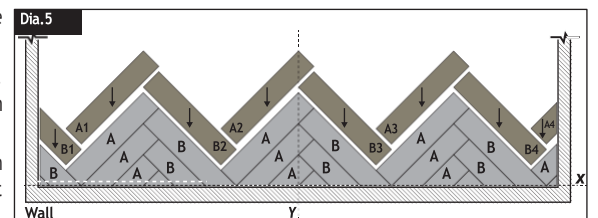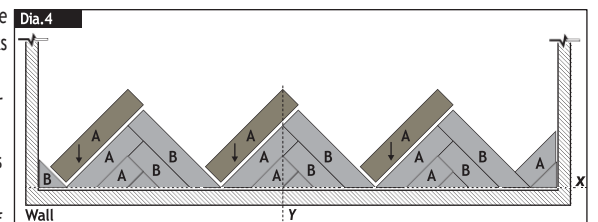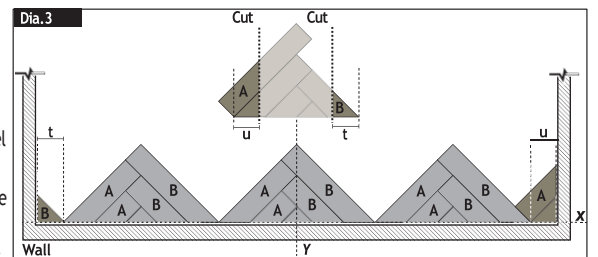

AFTER INSTALLATION

- Sweep regularly to remove surface grit and dust. Use a damp cloth or mop to clean up any dirt and footprints. All spills should be cleaned up immediately.
- Never use polish, abrasive cleaners, or scouring agents as they might dull or distort the finish. High heels can damage floors.
- Use protective pads under furniture. Do not use rubber or metal pads. Felt pads are highly recommended.
- Use doormats as entrance ways to protect the floor. Avoid using rubber backed rugs as they may stain the flooring.
- It's a good idea to save a couple of boxes of flooring in case of accidental damage. Planks can be repaired or replaced.
- If other trades are in the work area, a floor protector is highly recommended to help protect the finish of the floor.

SUPPORT

Forth Surfaces is dedicated in providing our customers the best flooring products available. All Forth Surfaces products are rigorously tested to ensure our customers receive the best flooring products.

- Product support is available through your authorized dealer, and you may also contact Forth Surfaces directly through email or phone for any questions or concerns.
- This is a comprehensive installation guide to ensure our customers experience a successful installation the first time, but does not cover all tricks and knowledge of a floor covering installation expert.

402 North Park Dr. #106 | Dalton, GA. 30720 |

Ph: Toll Free: (888)933.4746

FORTH SURFACES | **INSTALLATION GUIDE** | **TAILORED PLANK** | (888) 933.4746 | www.forthsurfaces.com

Email: hello@forthsurfaces.comstone